

ATN X-Sight 4K BH Series

ATN X-Sight 4K Pro Series

DAY & DAY/NIGHT RIFLE SCOPES




MANUAL

X-SIGHT 4K USER'S GUIDE



AMERICAN
TECHNOLOGIES
NETWORK
CORP.

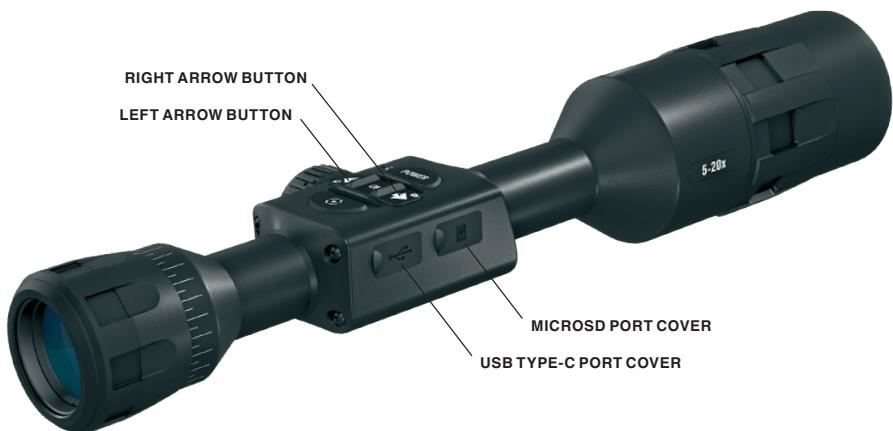

IR850
Infra-Red illuminator (included*)



* Only with the X-Sight 4K Pro models.

CAUTION!

THIS PRODUCT CONTAINS NATURAL RUBBER LATEX WHICH MAY CAUSE ALLERGIC REACTIONS

The information in this manual is furnished for informational use only, is subject to change without notice, is not to be construed as a commitment by ATN Corp.

ATN Corp. assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.
©2018 ATN Corp. All right reserved.

TABLE OF CONTENTS

Features	4
Application	4
Specifications	5
Preparing the Device	6
Unpacking	6
Charging the Device	6
Micro SD and USB C Ports	6
Firmware Update	7
ON/OFF	8
Using your Keypad and Scroll Wheel	8
Focusing	8
Mounting	9
Compass Calibration	9
Interface	10
Homescreen	10
Main Operations	11
Modes	12
Shortcut Carousel	12
Using System Settings	13
Functions	15
Night Vision	15
Photo Mode	16
Recoil Activated Video	17
Rangefinder	19
Zeroing	20
Ballistic Calculator	22
Reticle Style Adjustment	26
System Settings	27
Night Vision	27
Photo/Video	27
Display	27
Profiles/Zero	28
Settings	28
Warnings and Cautions	29
Mobile Applications	29
2 Year Product Warranty	30

FEATURES

 RECORD HD VIDEO	 SMART RANGE FINDER
 DUAL STREAM VIDEO	 BALLISTIC CALCULATOR
 BLUETOOTH	 RECOIL ACTIVATED VIDEO (RAV)
 SMOOTH ZOOM	 ONE SHOT ZERO
 E-COMPASS	 PROFILE MANAGER
 3D GYROSCOPE	 ULTRA LOW POWER CONSUMPTION
 DAY/NIGHT MODE*	 DUAL CORE PROCESSOR

* Only in X-Sight 4K Pro Series

APPLICATION

ATN has been at the forefront of your digital optic needs, and now we are surpassing all expectations by presenting a new series of products that delivers a profoundly new experience!

The X-Sight 4K Day/Night scope offers an enhanced HD Night Vision Mode, higher resolution and faster optics that allow for a faster image to form on the new HD Display. Our New 4K Sensor and Dual Core Processor gives you the power to Record Video and WiFi Stream at the same time!

You wanted longer lasting power capabilities? You got it! The X-Sight 4K scope includes a long lasting internal Lithium Ion Battery, allowing for up to 18 hours of power.

The X-Sight's new retro design allows you to use your traditional 30 mm mounting rings that will allow you to have plenty of eye relief while using the rifle you want.

Sighting your scope has never been easier with our One Shot Zero feature. Plus, a slew of other features, you have come to expect from the ATN Smart HD Optics line.

SPECIFICATIONS

Item	BH Series		Pro Series			
	X-Sight 4K BH 3-14x	X-Sight 4K BH 5-20x	X-Sight 4K Pro 3-14x	X-Sight 4K Pro 5-20x		
Magnification	3 – 14x	5 – 20x	3 – 14x	5 – 20x		
Field of view at 1000 yds	460 ft (9°)	240 ft (5°)	460 ft (9°)	240 ft (5°)		
Sensor	ATN 4K M265 Sensor, 3864 (H) x 2218 (V)					
Core	ATN Obsidian IV Dual Core					
System Resolution	600 lp/mm					
Micro Display	1280x720 HD Display					
Eye relief	90 mm					
Video Recording Resolution	1080p @ 30/60/120 fps					
Ballistic Calculator	Yes					
WiFi (Streaming, Gallery, & Controls)	iOS & Android					
Bluetooth	Yes					
3D Gyroscope	Yes					
3D Accelerometer	Yes					
E-Barometer	Yes					
Smart Range Finder	Yes					
RAV (Recoil Activated Video)	Yes					
Electronic Compass	Yes					
Smooth Zoom	Yes					
Reticles	Multiple Patterns & Color Options					
Microphone	Yes					
Micro SD card	4 to 64 Gb					
USB, type C	Yes					
Mount	30 mm Standard Rings (not included)	30 mm Standard Rings (included)				
IR Illuminator	Not included		Included			
Night Vision	No		Yes			
Battery life (Li-ion)	up to 18 hrs					
Battery type	Internal Lithium Ion Battery					
Waterproof rating / IP rating	Weather resistant					
Dimensions (body only)	13.8" x 3" x 3" 350x76x76 mm	14.9" x 3" x 3" 379x76x76 mm	13.8" x 3" x 3" 350x76x76 mm	14.9" x 3" x 3" 379x76x76 mm		
Weight	2.1 lb 0.94 kg	2.2 lb 1.01 kg	2.1 lb 0.94 kg	2.2 lb 1.01 kg		
Warranty	2 years					

* ATN reserves the right to change the above specifications at any time without notice

PREPARING THE DEVICE

UNPACKING

The following steps must be performed before using the device.

1. Open packaging box, remove X-Sight 4K.
2. Verify your box has the following: Optic, Optic Cover, Sunshade, Rubber Eye Piece, IR Illuminator (only with X-Sight 4K Pro), Rings (only with X-Sight 4K Pro), Charging Cable.
3. Inspect the device for damage to optical surfaces, body, eyecups, operation buttons, etc.
4. Ensure that all optical surfaces are clean and ready for use.

NOTE

If any accessories are missing or broken contact ATN's Customer Service at 1.800.910.2862.

CHARGING THE DEVICE


The device is equipped with a USB (type C) port. You will find it under the rubber cap on the right side of the device (caps are marked with appropriate icon).

We have included a USB (type C) charging cable with your scope. Plug the cable into a USB wall charger that has an output of 2 amps (Wall Charger not included).

Charge your scope for 6 hrs using a 2A USB wall charger. Note using a wall charger with lower amperage will take longer to charge your scope.

1. Recommended charger is 2A USB charger.
2. Battery charging time (from 0 to 100%) is 6 hours with 2A USB charger.
3. Battery run time is 18 hours on a single charge.

MICRO SD AND USB C PORTS

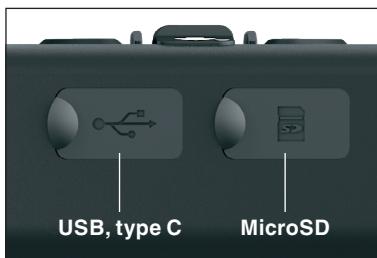

The device is equipped with a microSD Card and USB (type C) ports. You can find them under the rubber caps on the right side of the device (we marked the caps with appropriate icons).

To open the rubber port cover, gently lift the rubber cover and move it out of the way.

NOTE

Make sure that the device is turned off before inserting the formatted microSD Card into its assigned port.

1. Always format a new microSD card before using.
2. Insert microSD card as shown.
3. Use a thin object (small coin, paper clip) to lock the microSD card in place after inserting it into the slot.
4. Return the cover to its original position.



NOTE

There is only one correct direction to insert the microSD Card.

Do not force the microSD Card into the port doing so may cause damage to both the scope and the card itself.

To remove the microSD Card from the port, push the card slightly in using the same thin object you did before. When the card pops up a few millimeters, pull the card out with your fingers or tweezers.



NOTE

If you are going to record video, the microSD Card should be a Class 10 (10 Mb/sec) or faster and have capacity from 4 to 64 Gb.

FIRMWARE UPDATE

Before operating your device, update the firmware to the latest version. All firmware updates can be found on at <https://www.atncorp.com/firmware>.

To receive a notification concerning new firmware updates, please register your device on our website. An email notification will be sent when a new firmware update becomes available.

To update the firmware you will need a microSD Card and fully charged internal battery.


NOTE

In the event of a power failure during an update, the device may crash. This will corrupt the system files and the device will need to be sent back to the ATN factory for service.

To ensure your zero coordinates are not lost, write down your zero coordinates before continuing to update the firmware.

Update the new firmware as follows:

1. Download the ***.bin file and copy to your microSD Card — root directory.
2. Insert the card into the scope.
3. Turn ON the scope.
4. In the “Firmware Update” dialog box select “Yes” to start the update.
5. When the update counter reaches “100%” the device will automatically restart.
6. Once the device is powered up it will enter self configuration mode.
7. After completing it will automatically restart and will be ready for use.
8. Motion Sensing platform will be configured when first turned on.
9. Once the Firmware update completes, please do a factory reset before using the product.
10. Please delete the Firmware file off of the microSD card after the process is complete. Or the system will try to update the Firmware every time you turn the scope on.

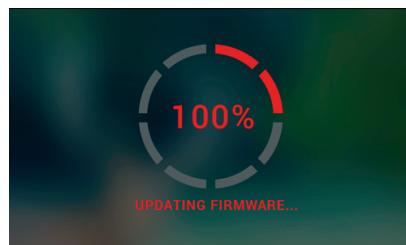

NOTE

If the device does not restart within 30 seconds, press and hold the power button for 15 seconds and the scope will turn off.

ON/OFF



To TURN ON the device, press and hold the POWER button until you see the ATN splash screen.

To TURN OFF the device, press and hold the POWER button, until “Shut down the device?” appears in the dialog box. Choose “Yes” to turn off.

USING YOUR KEYPAD AND SCROLL WHEEL

The KEYPAD is programmed to be used in two different ways:



- Short and Quick Taps — used for most functions and to get around the menu;
- Press and Hold — designed to be used in the following situations — ON/OFF, SHORTCUT MENU.

NOTE

Using LEFT or RIGHT buttons in the Menu. You can quickly choose Exit Shortcut from any position. Use the Function Button from any menu screen to exit to the Home Screen.

FOCUSING



DIOPTER ADJUSTMENT

By rotating the Diopter Adjustment Ring you will achieve optimal sharpness for your vision. Look through the eyepiece while focusing on the reticle and widgets on the screen.

NOTE

Once the Diopter Adjustment is set to your liking, adjustment will not need to be performed unless another user altered the focus for their needs.



DISTANCE FOCUS

Rotate the Adjustment Ring, as necessary, to achieve the proper focus at various distances.

MOUNTING

The X-Sight 4K has a 3-inch eye relief, and can be mounted using 30 mm mounting rings. ATN has provided two standard rings and one L shape ring (For X-Sight 4K Pro only). The L shape ring is for those instances when you need extra eye relief for certain rifles. First, choose your preference of rings and position and mount the bottom

portions of your rings to your rail for optimal eye relief. Place the scope on the bottom half of the rings you just mounted, verifying you have sufficient eye relief for your platform. Place the top portion of your ring over the mounted bottom portion, make sure the holes align and the screws turn easily. Apply equal torque to all screws with the provided Allen wrench. Make sure your rings are tight on your rifles rail and will not come loose due to recoil.

For mounting the X-Sight 4K on the weaver rail:

1. Loosen the fixing screws on the sides of the mounting rings.
2. Place the rifle scope on the weaver rail so that the projection of the rail, which is in the base of the ring, enters the recess in the rail.
3. Tighten the fixing screws of the mounting rings.

CAUTION!

Be sure your weapon is not loaded. Use safe weapon handling procedures at all times.

NOTE

Rings are only included with the X-Sight 4K Pro models only.

COMPASS CALIBRATION


When the compass needs to be calibrated the word “CAL” appears instead of the Compass Scale. To calibrate you should rotate the device on three axis as pictured on the right.

NOTE

After calibrating the device please remember that the compass will work best when holding the X-Sight parallel to the ground.

Other possible abbreviations:


- ERR — an error was detected;
- SMF — your device is under Strong Magnetic Field;
- UPD — your firmware needs to be updated.

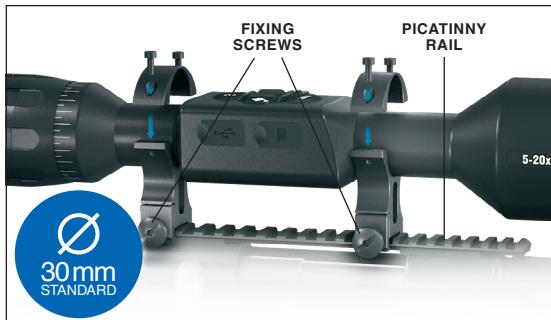

INTERFACE

HOMESCREEN

The first screen you'll see after turning on the device is the Homescreen. It consists of Scales, Status Bar icons and different Information Widgets.

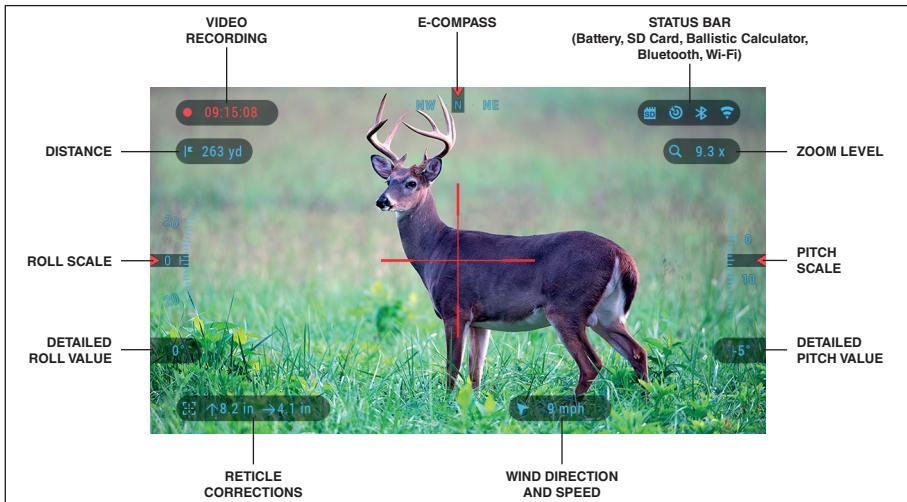

SCALES

E-Compass Scale shows yaw angle, based on e-Magnetometer data.

Roll Scale shows rifle cant, based on internal 3D Gyroscope.

Pitch Scale shows rifle inclination, based on internal 3D Gyroscope.


STATUS BAR

Displays information about the current state of the system. Icons that are inactive become invisible when not in use, and only the important information will appear.

- Battery — shows how much energy is left in the system.
- Micro SD Card — shows the presence or absence (red icon) of memory card.
- Ballistic Calculator, Bluetooth, and WiFi — shows when the function is enabled.

WIDGETS

Interface elements will appear as widgets that will provide access to useful information. There are several types of widgets:

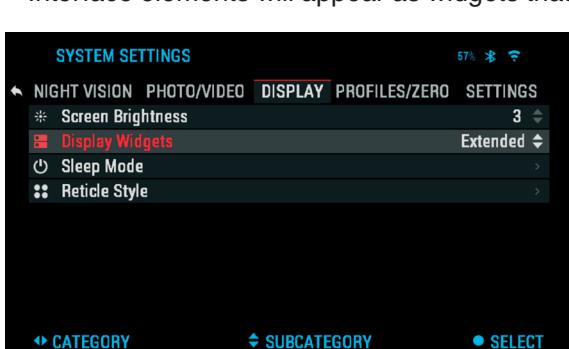

- icons without value are used for mode displaying (Photo and Video Modes);
- only numerical value (Detailed Roll and Pitch Values);
- icons with a numerical value; Range, Zoom, Reticle Correction, Wind Speed.

- Photo Preview appears at the bottom of the homescreen, after the photo is taken.


Display widgets can be disabled from the System Settings.

To enter System Settings you should click the OK button  from Homescreen to access the Shortcut Carousel.

Select the wrench icon with RIGHT or LEFT buttons  and push the OK button  to enter the System Settings menu.

Select the Display tab with RIGHT button  and choose subcategory Display Widgets with the Scroll Wheel.

Press the OK button  to select the Display Widgets. Use the Scroll Wheel to change from Extended to Minimal.

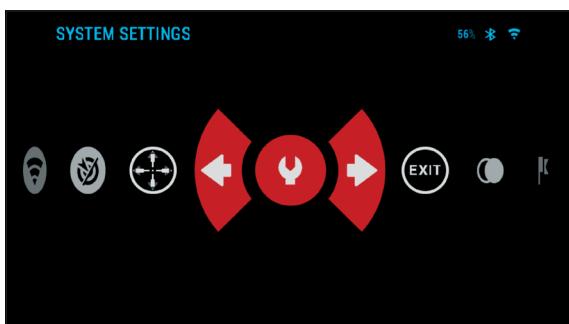

MAIN OPERATIONS



ZOOM LEVEL

Use the Scroll Wheel on the left side of the scope to Zoom IN and OUT. Zoom Level is displayed in the Zoom widget on the Homescreen.

NOTE

When the device is activated for the first time, you need to configure the lens option in the pop-up window before zooming. Please refer to System Settings, Lens Type on page 29.



TAKING PHOTOS

Press the LEFT button  to TAKE A PHOTO.

Depending on the selected mode, you will take one or several photos. Various photo modes are available in the System Settings.



VIDEO RECORDING

By pressing the RIGHT button  you will be able to RECORD VIDEO (if you use Normal Mode) or START RAV (if Recoil Activated Video mode is on).

The video recording modes can be switched in the System Settings options.

NOTE

Recording will automatically stop when the memory card is full or the battery is out of power.



SHORTCUT CAROUSEL

Pressing down on the OK button  opens and closes the Shortcut menu.

MODES

The X-Sight 4K Pro has 2 modes of operation: basic and advanced.

Basic Mode has the following feature options:


1. Exit
2. System Settings
3. Night Mode (X-Sight 4K Pro Models Only)
4. Advanced Shortcut
5. Zero Reticle

Advanced Mode has the following feature options:

1. Exit
2. System Settings
3. Night Mode (X-Sight 4K Pro Models Only)
4. Range Finder
5. Advanced Shortcut
6. Distance Entry
7. Environment
8. WiFi
9. Zero Reticle
10. Ballistic Calculator
11. Gallery

SHORTCUT CAROUSEL

The Carousel is your access to a number of shortcuts that will allow you to quickly access your scope's features. Click the OK button  from Home-screen to access the Carousel.

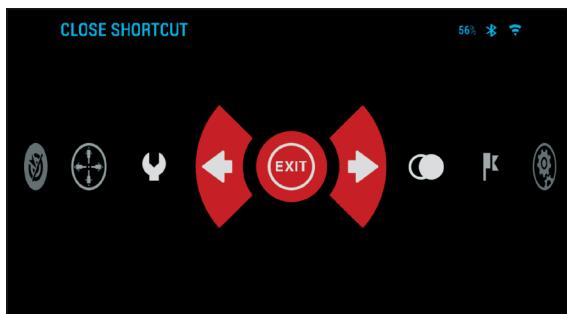

Buttons highlighted in Red are the only ones that activate a particular shortcut.

Use the LEFT & RIGHT buttons  to move between functions, except with the group of ON/OFF switches (WiFi, Bluetooth, Ballistic Calculator, RAV),

use the Scroll Wheel between switches.

To turn a particular function on or off, you should click the OK button  while that function is selected. Example — WiFi.



EXIT
Exit Carousel.



NIGHT MODE
Switch between Day and Night Mode.

Note: *Night Vision Mode is only available on the X-Sight 4K Pro Series.*



RANGEFINDER
Activates Smart Rangefinder feature. If the Ballistic Calculator is ON then the range that is found using the Rangefinder will be automatically used to adjust your point of impact (shift reticle to adjust for drop).



DISTANCE ENTRY
Manually input or adjust the distance to the target to be used by the Ballistic Calculator.



GALLERY

Gives you access to the library of Images and Videos that are stored on your scope's micro SD card.



ENVIRONMENT

Allows for input of various environmental data to improve ballistic correction, such as wind speed and direction.



SYSTEM SETTINGS

Allows access to various system options and adjustments.



WIFI

Allows you to connect to your smart phone or tablet; password is **atnsmarthd**.



BLUETOOTH

Allows you to connect to ATN Smart accessories, that use Bluetooth, to communicate with your scope.



BALLISTIC CALCULATOR


Allows you to have the scope automatically adjust your reticle POI for bullet drop, based on the ballistic information you input into the scope.



RAV (Recoil Activated Video)

Allows you to record your hunt without having to press the record button.

USING SYSTEM SETTINGS

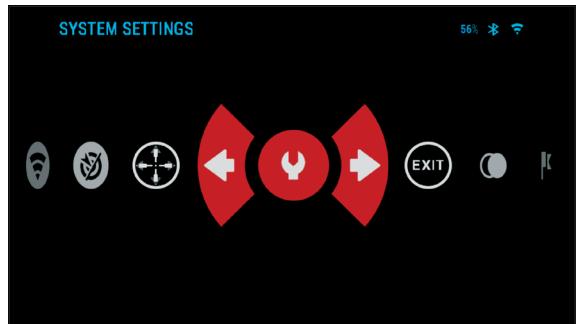

To enter the System Settings, open the Shortcut Carousel by pressing the OK button . Select the wrench icon with RIGHT or LEFT buttons .

Push the OK button to enter the menu.



The System Settings consists of a Tab Bar at the top of the screen, list of subcategories in the center and Help Information at the bottom.

On the left side of the Tab Bar you will find the Exit (with arrow icon). Selecting Exit and pressing the OK button

will bring you back to the Homescreen.


Movement between the tabs is carried out using the LEFT and RIGHT buttons

Each tab includes subcategories. To select a particular subcategory you should use the Scroll Wheel and press the OK button

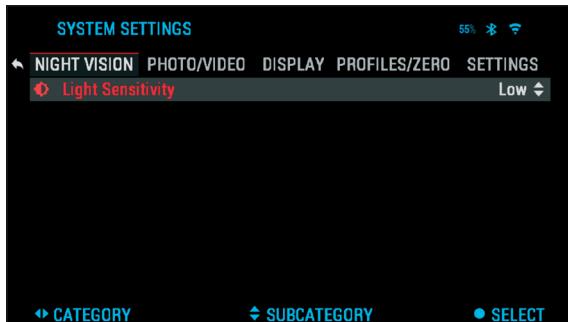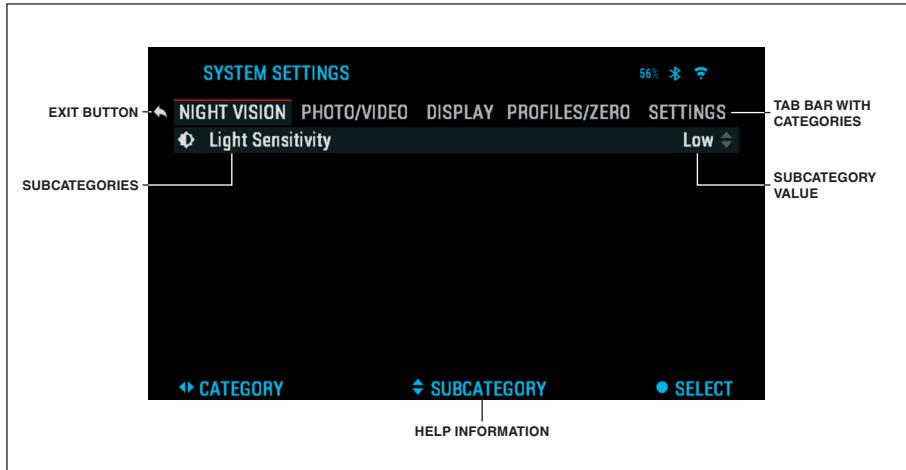


To change a particular value, follow the next few steps. Select the subcategory you need with the Scroll Wheel.

Press the OK button  to select a particular value (once selected it will turn red).

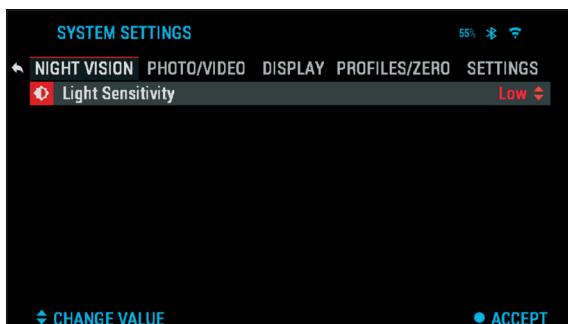

Change the value with the Scroll Wheel.

To select a new value, press OK button  to confirm the change.

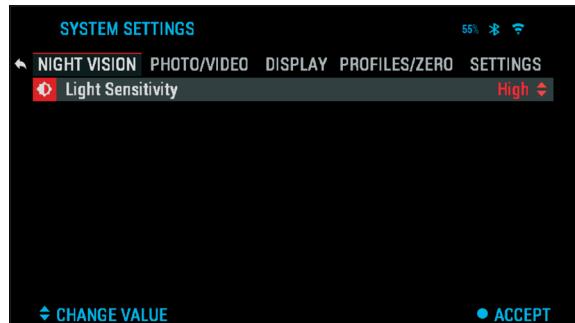

FUNCTIONS

NIGHT VISION

NOTE

Night Vision Mode is only available in the X-Sight 4K Pro Series.

To switch between Day and Night Mode, choose NIGHT MODE in Shortcuts. Just click the OK button  to access the Carousel.

Shortcuts allow you quick access to the Carousel that contains your scope's features. Just click the OK button  to access the Carousel.




Buttons highlighted in Red are the only ones that activate a particular shortcut.

Movement between the items is carried out using the LEFT & RIGHT buttons .

NOTE

Remember that turning on Night Mode during daylight will not harm your device; however, you may not be able to see anything due to the image being too bright.

You can adjust the Light Sensitivity in the System Settings (see Night Vision section, pg. 27).

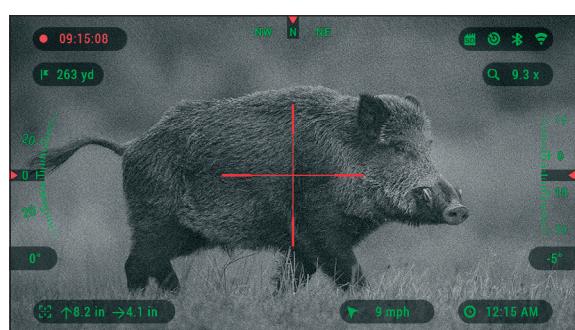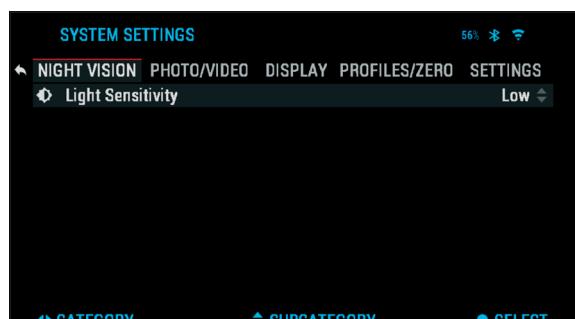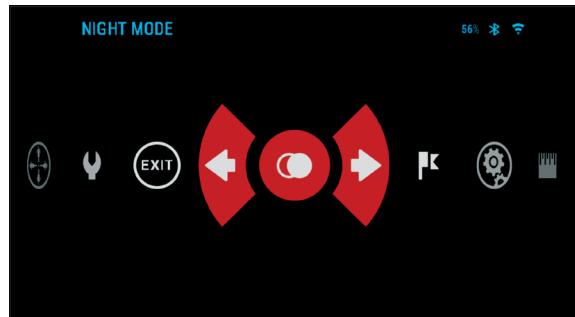



out using the RIGHT or LEFT buttons .

NOTE

For the best video quality while recording in Night Vision mode. We suggest having your Light Sensitivity settings on Low.

PHOTO MODE

Press the LEFT button  while staying on the Homescreen to TAKE A PHOTO.

You must have a microSD card inserted in the device for this feature to work. All files will be stored on the microSD card.


Depending on the selected mode, you will take one or several photos. You can choose from various photo modes in the System Settings.

To enter the System Settings you should open the Shortcut Carousel by pressing the OK button  and selecting the wrench icon with RIGHT or LEFT buttons .

Push the OK button  to enter the menu. Use the Right button till you select the Photo/Video tab.

There are three photo modes to choose from. Switching between modes is done in the System Settings from the Photo/Video tab, subcategory Photo Mode.

Use the Scroll Wheel to switch between modes. Press the OK button  to select a particular value (once selected it will turn red).

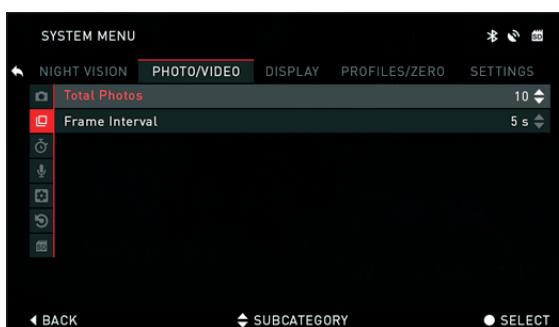

images with an interval of time between each image.

The interval and the number of photos taken can be changed in the System Settings.

To make changes, choose the Photo/Video Tab in System Settings, then use the Scroll Wheel to select Time Lapse Settings.

To enter the System Settings, open the Shortcut Carousel by clicking the OK button . Select the wrench icon with RIGHT or LEFT buttons .

Push the OK button  to enter the menu.

Choose Night Vision in the Tab Menu. Movement between the tabs is carried



SINGLE

This default mode allows you to take one photo at a time.



TIME LAPSE

Time-lapse is where the device takes a sequence of images with an interval of time between each image.

Press the OK button  to enter the mode settings. While you are in this mode, the Time Lapse widget appears.



BURST

Burst mode captures a series of photos.

You can select the best image of the group or arrange them in a sequence to study the transitions in detail.

The number of photos taken can be changed in the System Settings. While you are in this mode, the Burst widget appears.

Regardless of which mode you are using, the photo preview appears after a photograph is taken on the bottom of the screen for several seconds.

RECOIL ACTIVATED VIDEO

Recoil Activated Video (patent pending) offers a unique approach to taking videos with your Smart Sight. RAV offers you the ability to take a video of before, during and after your shot has been fired.

Perfect for those hunting moments when hitting your target, far outweighs the importance of remembering to turn on your video record. Simply set your RAV to ON, set your parameters. Anytime you Pull the Trigger, RAV is activated from the recoil of your weapon and the sight will record a number of seconds before your shot, and a number of seconds after.

All conveniently organized as one continuous video.

Press the RIGHT button  to Activate RAV from the Homescreen to Start Video recording. Press the RIGHT button  again to stop Video recording.

NOTE

It may be best to turn OFF the Microphone in conditions of extreme wind.


You can turn on the microphone and switch the quality of the video in the System Settings (Photo/Video tab).


To enter the System Settings you should open the Shortcut Carousel by pressing the OK button  and selecting the wrench icon with RIGHT or LEFT buttons .

Push the OK button  to enter the menu.

You must have a microSD card inserted in the device for this feature to work. All files will be stored on the microSD card. Recorded videos can be found in the Gallery on your device.


The scope allows you to record videos in two modes.

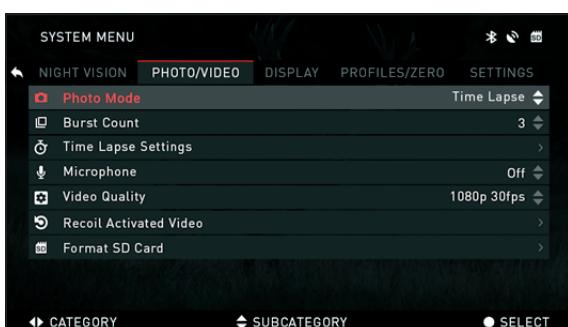

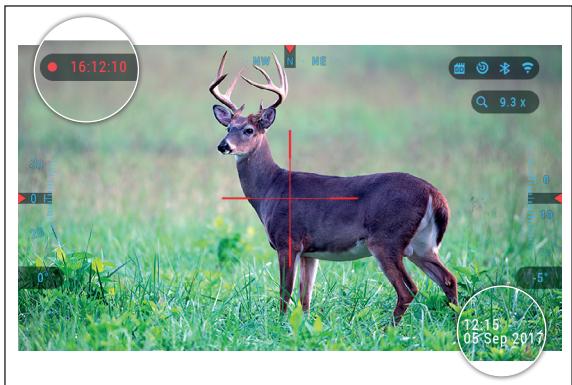

NORMAL

The default mode. While recording the Counter widget appears.

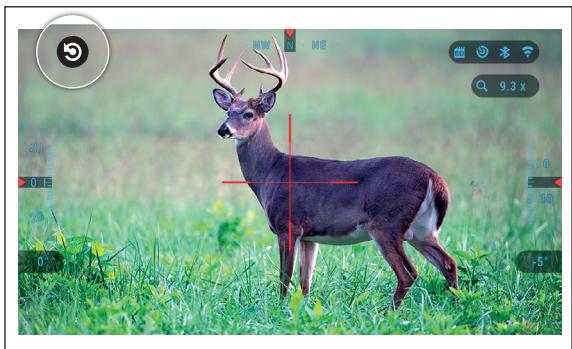


RECOIL ACTIVATED VIDEO (RAV)

When you set your video record to RAV mode (from Shortcut Menu), the system buffers everything your scope sees.

While you are in this mode, the RAV widget appears and then after starting to record the Time Counter appears.

After activating the RAV function in the Shortcut Carousal, return to the Homescreen. Continue the activation process by pressing the RIGHT button  that activates Video. Also, make sure you see the RAV icon on the Home screen upper left corner.

When a shot is fired and your scope experiences recoil (some airguns may not provide enough recoil for RAV to be activated). The scope will record video prior to the shot being taken, the moment of, and some time after. Exact settings may be adjusted in the System Settings.

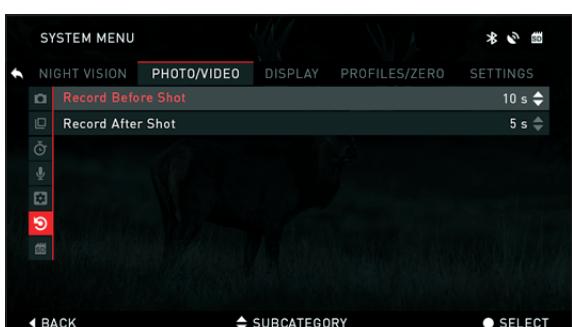

RANGEFINDER


Using the Smart Range Finder will allow you to estimate the distance to your target, as long as you have reasonable knowledge of the size of your target.

NOTE

To have this feature enabled you must activate Advance Mode settings.

NOTE

Once the distance is measured, the value will be automatically integrated into your Ballistic Calculator.

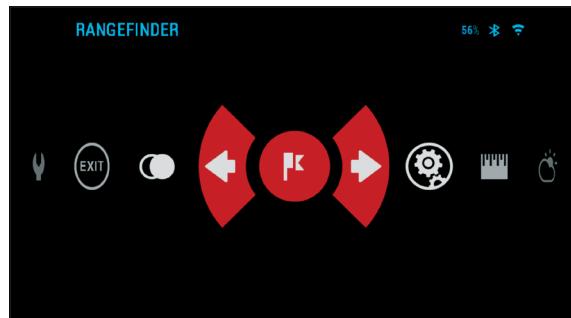



RANGEFINDER

Select the Flag Icon from the Shortcut Carousel.

Pressing the OK button  will take you to the Main Screen of the Rangefinder feature.

To measure the distance, follow the next steps:


- put the arrow-mark on the top of the target and press the OK button ;
- wait for the scope to take the readings (it will take a number of readings so try to keep your weapon steady);
- put the arrow-mark under the target and press the OK button ;
- if satisfied with the value that was generated, press the Function button to go back to the Homescreen or repeat steps 1 and 2, if necessary.

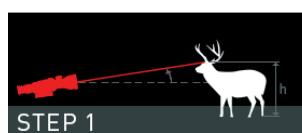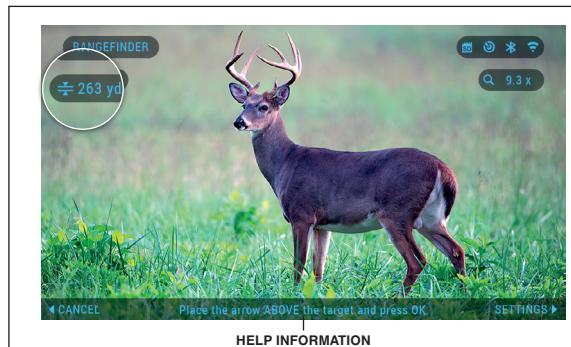

STEP 1



STEP 2

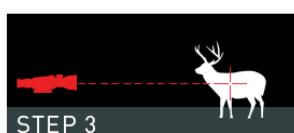

STEP 3

NOTE


During the measurement process, you can zoom in and out using the Scroll Wheel.

If the Target Height is incorrect you can change it:

- press the RIGHT button  to enter the Menu;






- choose one of the presets or input the height manually;
- accept the height with OK button  and go back to the Main Screen.

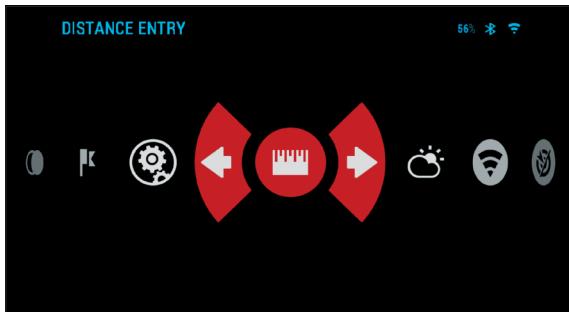

DISTANCE ENTRY

Allows you to input or correct the distance manually. Choose the Distance Entry option to launch this function.

Change distance value using the Scroll Wheel. To accept the new distance, press the OK button .

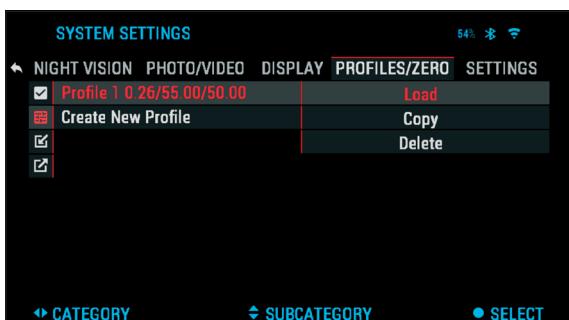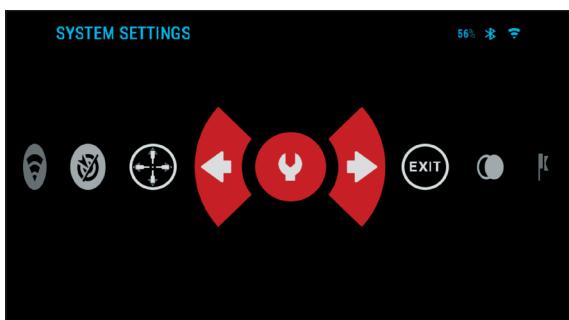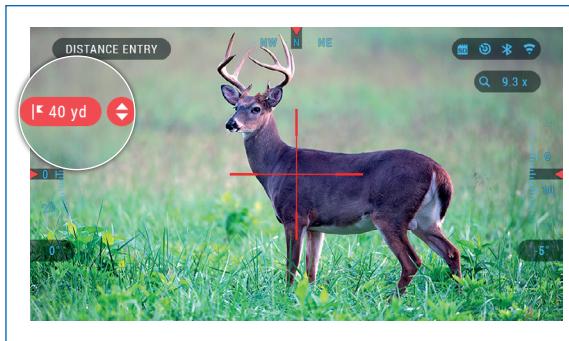

ZEROING

To Zero in your scope you will need to go to the Profile/Zero section of the System Settings, or select it from the Shortcut Carousel.

To enter the System Settings, open Shortcut Carousel with OK button  and select the wrench icon with RIGHT or LEFT buttons .

Push the OK button  to enter the menu.

Before you begin the Zeroing process you will need to either create a new Profile or utilize an existing one. We recommend to create a new one to understand the process better.

Under the Profiles/Zero Category you will find Current, Other, Import from SD card, Export to SD card. Select Other. There you will see Profile 1 and Create New Profile. You can select Profile 1 and edit it, or create a new one and make changes to it. Once you select a profile, press the OK button  to load it. Once the profile is loaded, it becomes your current profile.

Profiles are primarily used in order to utilize your scope on various weapons. This way, when moving your scope from one gun to the next, you can simply select the Profile that you have already created for the particular gun you are using. Multiple profiles are also used to zero in the scope, on the same gun, but at different ranges. For example, one Profile may be called AR 50 yards and another AR 200 yards. Allowing you to create two separate profiles to better fine tune your shooting solutions for both shorter and longer range shooting.

In order to change the profile name to what you want, open the ATN Obsidian app and connect your Phone/Tablet to your scope.

To zero your rifle with the ATN device, follow the next few steps.

Zeroing Scope:

In the System Settings, Select the Profiles/Zero Tab. The main Subcategories of the Profiles/Zero are Current, Other, Import from SD card and Export to SD card. Select Current, by pressing the OK Button. There you will see Zero Reticle. We suggest you fill out all the ballistic info, to the best of your ability, before proceeding to Zero. This will save you time when you want to use the Ballistic Calculator at a later time.

Proceed to Zero the Reticle. Press the OK button 

to select Zero Reticle. You will see on your screen a cross hair reticle. While keeping the gun as steady as possible, fire a round. Use the key pad and scroll wheel to move the Red cross hair to the point of impact. While keeping the White crosshair in the same place you were aiming. Once you have placed the Red crosshair on the POI, press the OK button . A dialogue box will appear with options. Select Save & Exit.





NOTE

Although you may not need more than one shot to Zero in your scope, we do recommend that you repeat the process several times to make sure that you truly are Zeroed in. As you gain experience in Zeroing in your scope it should take you no time at all to Zero it.



NOTE

In order to fine tune your zero, select the Zero Reticle once more. Press the OK button  and select Zoom. Zoom in all the way and fire the weapon. If your POI is not where you aimed, move the Red reticle to the POI and Exit & Save. This will ensure your POI is the same on

optical and maximum magnification.

NOTE

Before Zeroing your scope, please make sure the correct lens type is selected. You can check this by going to the System Settings and selecting Settings. You will see the subcategory Device Type. Please make sure you select the lens type of your scope.

This lets the system know which Scope you are actually using (example: X-Sight 4K 3-14 or 5-20).

BALLISTIC CALCULATOR

The X-Sight 4K has a fully integrated Ballistics

Calculator that enables your scope to seamlessly adjust its point of impact. The first step in utilizing this function requires you to enter all relevant information into the Profile that is being used.

NOTE

To have this feature enabled you must activate Advance Mode settings.

NOTE

If you do not know all or part of this info (example: Initial Velocity), we recommend that you contact the manufacturer of the ammunition and/or the weapon that you are using. Generally this info should be found on the manufacturer's website.

Once your profile has been setup, you are ready to activate the Ballistic Calculator on your sight. Open the Shortcut Carousel and follow the instructions in this section. To enable this feature you must activate the Advance Mode settings.


You will need to scroll, with the Scroll Wheel, to find the Ballistic Calculator bullseye icon. If this function is off (indicated by a diagonal line running through the icon), you will need to turn it on by pressing the

OK button  while having the icon selected. You will see the diagonal line disappear and the Ballistic Calculator icon will appear in the top right corner of the screen.

Profiles which are not in use are situated in the Other section. You can use an existing profile or create up to 6 new user profiles.

To edit a Profile, select it (highlighted in red) and press the OK button .

Choose the action you want to perform; Load, Copy (Duplicate) or Delete the selected profile.

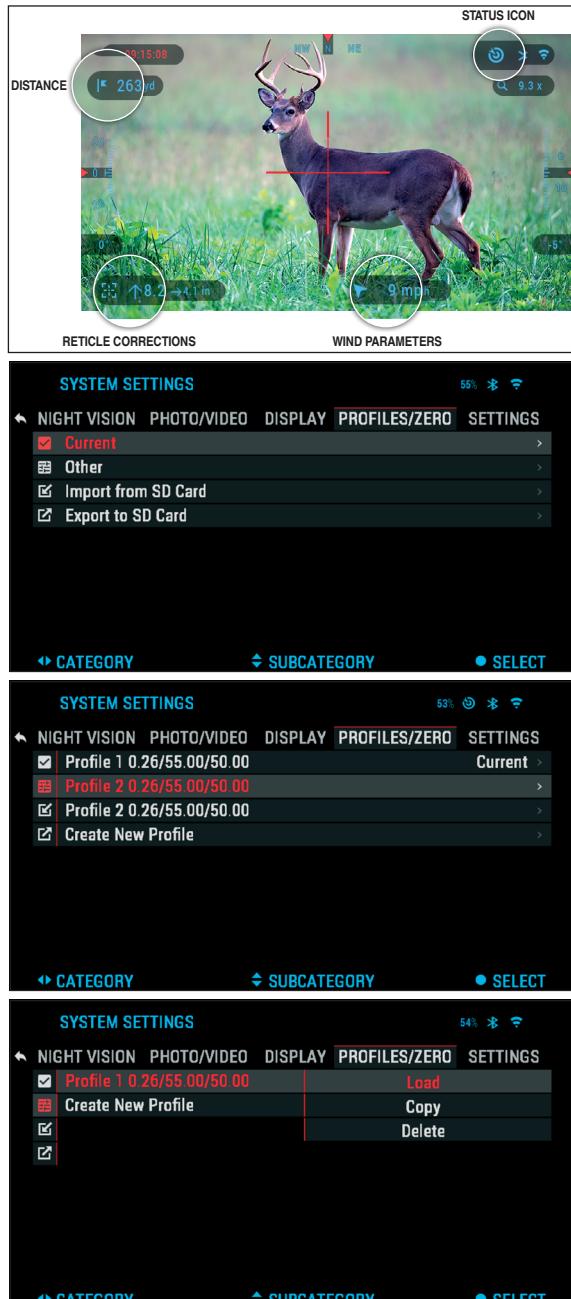


ENVIRONMENT

NOTE

To have this feature enabled you must activate advance mode settings.

There are a number of Environmental elements that may be entered to increase the precision of your shots.

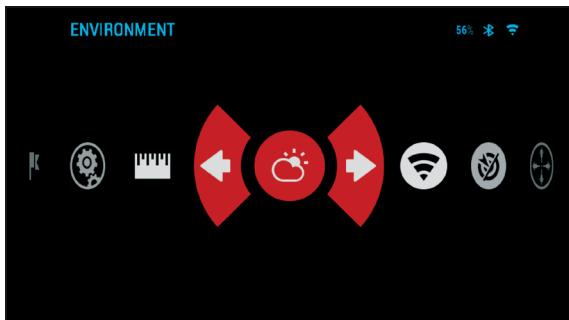

Environment shortcut or by utilizing the Obsidian App.

Barometer Pressure, Altitude and Temperature:

Both Pressure, Altitude and Temperature will be set automatically using your sight's internal sensors.


Other Data Collected:

The angle of your scope, as in relation to your target, is also noted and the Ballistic Calculator takes the information into its calculations.

RANGING IN ON YOUR TARGET

Clearly, the number one priority to achieve accuracy in long range shooting is to know the range to your target.

The Ballistic Calculator will make your adjustments for you, but only after you have entered the distance to your target.

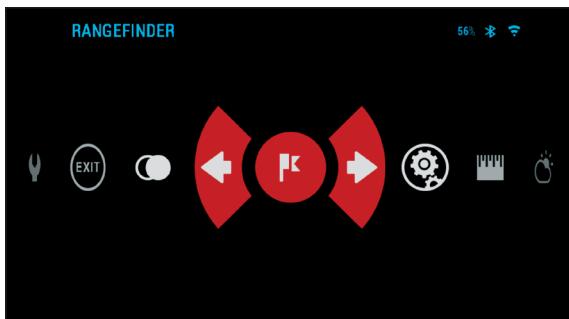

Wind:

Wind strengths and direction are by far the most important of the group, especially during medium to heavy winds. We highly recommend that if you plan to shoot at ranges over 300 yards. Take wind readings and enter the information into your sight. Both wind speed and wind direction are needed if you plan to make accurate shots. You can enter the information through the Environment shortcut or your mobile device using the Obsidian App with a WiFi connection to your scope, whichever you find easier.

Humidity:

Humidity must also be entered through the Envi-

ronment shortcut or by utilizing the Obsidian App.

Your sight offers several ways to accomplish this task.

RANGEFINDER

NOTE


To have this feature enabled you must activate advance mode settings.

Select the Flag Icon from the Shortcut Carousel.


Pressing the OK button  will take you to the Main Screen of the Range-finder feature.

To measure the distance, follow the next steps:

1. Put the arrow-mark on the top of the target and press the OK button , wait for the scope to take readings (it will take a number of readings so try to keep your weapon steady);

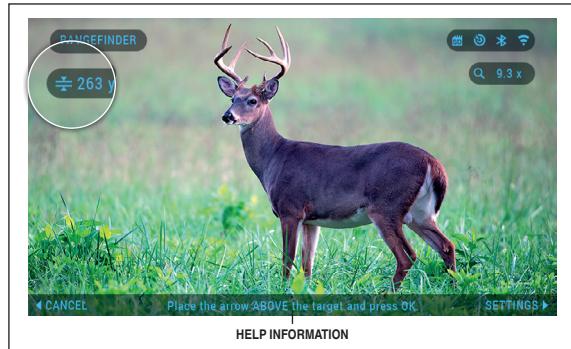

2. Put the arrow-mark under the target and press the OK button ;
3. If satisfied with the value, press the LEFT button  to go back to the Homescreen or repeat steps 1 and 2, if necessary.

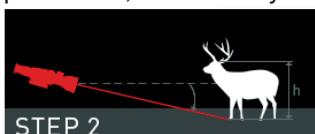


NOTE

During the measurement process, you can zoom in and out using the Scroll Wheel.

If the Target Height is incorrect, you can change it:

- press the RIGHT button  to enter the Menu;
- choose one of the presets or input the height manually;
- accept the height with the OK button  and go back to the Main Screen.

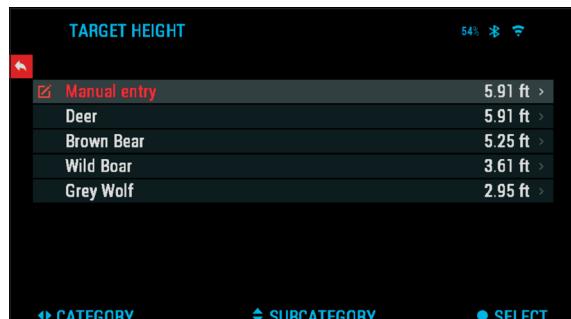


DISTANCE ENTRY

NOTE

To have this feature enabled, you must activate advance mode settings.

If you are using other means, such as a Laser Range Finder, you may enter the distance manually using the Distance Entry shortcut.

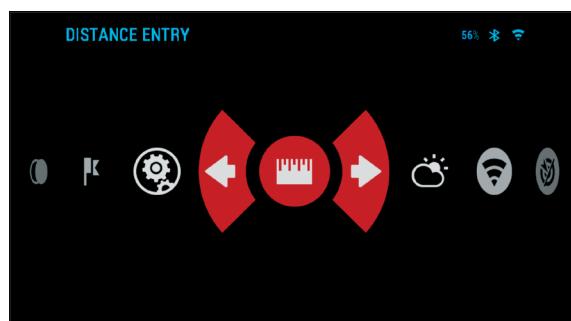

Change distance value using the Scroll Wheel. To accept the new distance press the OK button .

RETICLE STYLE ADJUSTMENT

You can manage reticle style in the System Settings (Display section).

To enter the System Settings, open the Shortcut Carousel by pressing the

OK button  and selecting the wrench icon with RIGHT or LEFT buttons  .

Select the OK button  to enter the menu.

Choose Display in the Tab Menu. Movement between the tabs is carried out using the LEFT and RIGHT buttons  .

Using the Scroll Wheel, select the Reticle Style subcategory. Press the OK button  to select it.





To change the Reticle Shape press the OK button .

Select the preferred Reticle style that suits your preference. Use the scopes Key Pad arrows to switch between shapes.

To accept the Reticle, press the OK button .

You can change Reticle Color to whatever color suits your preference.

Movement between the colors is carried out using the LEFT and RIGHT buttons   . Press the OK button  to accept your color.

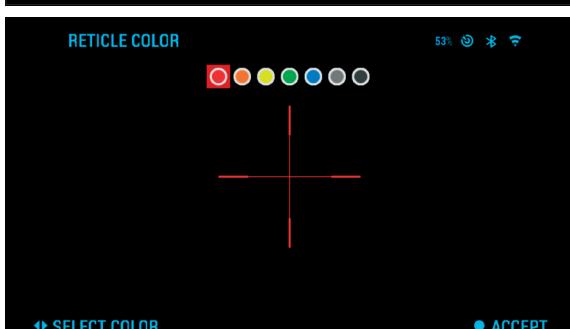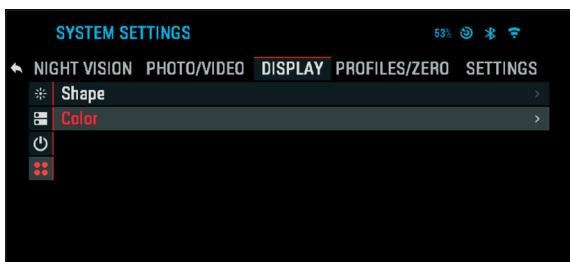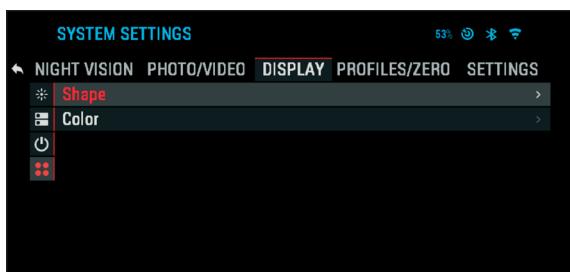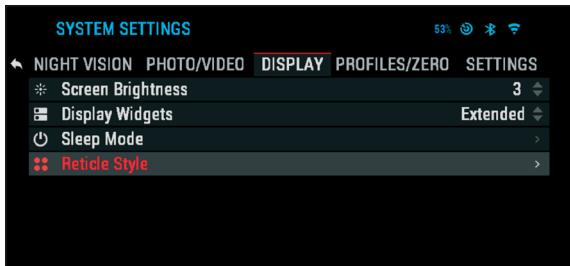

SYSTEM SETTINGS


NIGHT VISION

NOTE

Night Vision Mode is only available in the X-Sight 4K Pro Series.

LIGHT SENSITIVITY

There are two options for Light Sensitivity; Low or High. On the Low setting, you will get 30 fps. On the High setting, you will get 15 fps. Your selection will depend on the amount of ambient light needed for optimal performance.

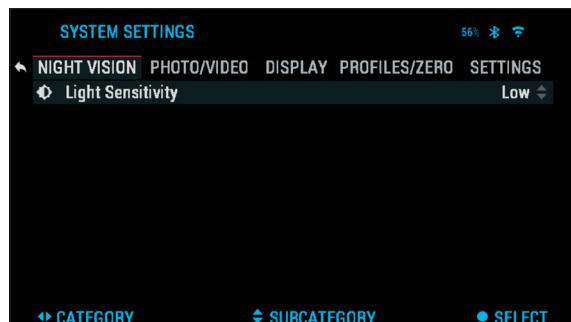

PHOTO/VIDEO

PHOTO MODE — includes Single (capture a single photo), Time Lapse (series of photos at timed intervals) and Burst (up to 10 photos in one second) modes.

BURST COUNT — amount of photos in one second (2 – 10).

TIME LAPSE SETTINGS

- Total Photos — amount of photos in a series (2 – 10).
- Frame Interval — length of the interval (2 – 15 sec).

MICROPHONE

— sound recording (ON/OFF).

VIDEO QUALITY


— can be 1080p @ 30/60/120 fps.

RECOIL ACTIVATED VIDEO

- Record Before Shot — the time before pulling the trigger (5 – 30 sec).

- Record After Shot — the time after pulling the trigger (5 – 30 sec).

FORMAT SD CARD — after you choose this subcategory, you'll see a pop-up window asking you about formatting.

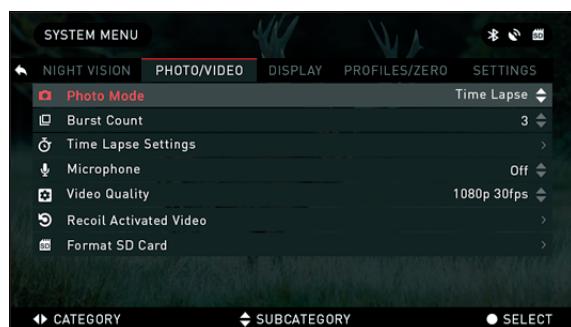


DISPLAY

SCREEN BRIGHTNESS

Gives you a 1 to 5 numerical selection, with 1 being the dimmest and 5 the brightest. It is recommended that you use the brightest setting during the day for optimal performance.

DISPLAY WIDGETS

— allows you to disable several widgets (Minimal/Extended).

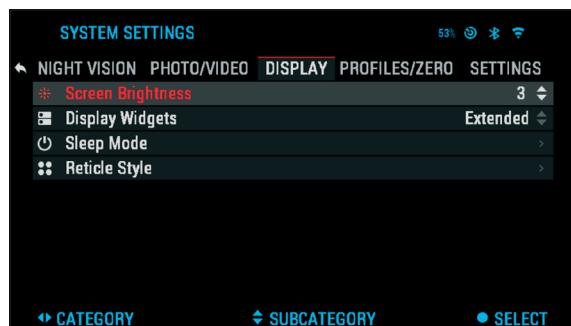

SLEEP MODE


- Sleep Mode — allows you to switch the mode (ON/OFF)
- Hibernation Time — can be 1 – 60 min

RETICLE STYLE

- Shape — you can choose the shape of your Reticle.
- Color — you can choose the color of your Reticle.

PROFILES/ZERO

CURRENT

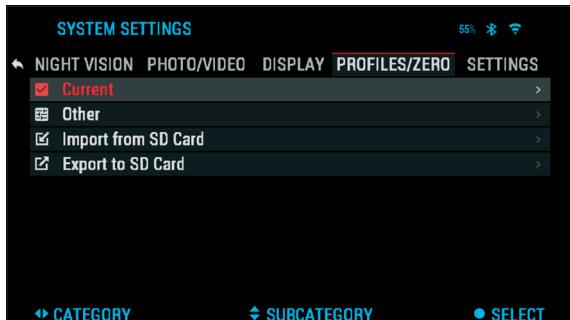

- Initial Velocity — is the velocity of the projectile as soon as it leaves the barrel.
- Zero Range — is the range that a firearm is sighted at.
- Sight Height — is referring to the distance between the center of the optics and the center of the barrel.

OTHER

- Profile Name — list of existing profiles.
- Create New Profile — allows to create up to 6 profiles.

SETTINGS



UNITS — can be Metric or Standard system.

DATA AND TIME

- Clock Source — allows you to choose different types of sources to improve the accuracy (Manual, WiFi or GPS).
- Date Format — can be YYYY-MM-DD, MM-DD-YYYY, DD-MM-YYYY.
- Time Format — form of

stating the time (24-hour or 12-hour).

- Date — enter the date.
- Time — enter the time.
- Time Zone — allows you to choose a geographical region with standard time.

WIFI — values are not changeable.

- SSID
- Password
- MAC Address

LENS TYPE — to make all features work correctly you need to choose the type of lens you have. (Example: 3x stands for 3-14 and 5x stands for 5-20).

ZOOM — allows you to choose different types of zoom (Standard, Extended). Extended Zoom will give an electronic zoom of 10x your optical Zoom. Example: 3-14 in Extended mode becomes 3-30x. However, we would like to caution you that you will begin to see considerable pixelation at such a zoom.

RESTORE FACTORY SETTINGS — allows to reset all the settings to default.

FIRMWARE VERSION — allows you to learn the firmware version currently running on your sight. We recommend that you register your product on our home page (www.atncorp.com) in order to make sure that you are getting emails when new firmware versions become available. We are constantly working on new features, functions, and improvements that we provide to you free of charge via firmware upgrades.

WARNINGS AND CAUTIONS

- Always remember to turn off the device when it is not in use.
- Do not disassemble, drop, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint or insert foreign objects: it will void your warranty.
- Keep the scope in the provided protective cover when not in use.
- Avoid contact with dust, steam, and gas.
- This product contains natural rubber latex which may cause allergic reactions.
- The scope is a precision electro-optical instrument and must be handled carefully.
- Do not scratch the external lens surfaces or touch them with your fingers.

CAUTION

Failure to follow these safety instructions could result in damage to the device!

MOBILE APPLICATIONS



By utilizing the  ATN Obsidian 4 app, you can control your device and view live streaming. Connect a phone or tablet and view everything simultaneously.

Want to see what you've recorded so far? No problem, once connected to the app via WiFi, open up the Gallery and playback your latest adventures. All your photos and videos are right at your fingertips.

In order to download the latest version of the ATN Obsidian 4 App. Please visit the iOS store or Google Play store. Search for "ATN Obsidian 4" install the application.

Make sure to enable WiFi on your Device in the Shortcut Carousel.



Make sure your smart phone or table is not connected to any other WiFi connection.

In your Smart Phone/Tablet go to your WiFi connections and select SSID for example (DeviceName_XXXX).

Password is “atnsmarthd”.

Once you connect to your device with your Smart Phone/Tablet.

Open the application. You should see the device which you are connected to in the app.

Select the Device Name. This will allow you to control your ATN device with your Smart Phone/Tablet.



[iOS Application](#)



[Android Application](#)

2 YEAR PRODUCT WARRANTY

This product is guaranteed to be free from manufacturing defects in material and workmanship under normal use for a period of 2 (two) years from the date of purchase. In the event a defect that is covered by the foregoing warranty occurs during the applicable period stated above, ATN, at its option, will either repair or replace the product, and such action on the part of ATN shall be the full extent of ATN's liability, and the Customer's sole and exclusive remedy. This warranty does not cover a product (a) used in other than its normal and customary manner; (b) subjected to misuse; (c) subjected to alterations, modifications or repairs by the Customer or by any party other than ATN without prior written consent of ATN; (d) special order or “close-out” merchandise or merchandise sold “as-is” by either ATN or the ATN dealer; or (e) merchandise that has been discontinued by the manufacturer and either parts or replacement units are not available due to reasons beyond the control of ATN. ATN shall not be responsible for any defects or damage that in ATN's opinion is a result from the mishandling, abuse, misuse, improper storage or improper operation, including use in conjunction with equipment which is electrically or mechanically incompatible with or of inferior quality to the product, as well as failure to maintain the environmental conditions specified by the manufacturer. This warranty is extended only to the original purchaser. Any breach of this warranty shall be waived unless the customer notifies ATN at the address noted below within the applicable warranty period.

The customer understands and agrees that except for the foregoing warranty, no other warranties written or oral, statutory, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, shall apply to the product. All such implied warranties are hereby and expressly disclaimed.

LIMITATION OF LIABILITY

ATN will not be liable for any claims, actions, suits, proceedings, costs, expenses, damages or liabilities arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. ATN's sole undertaking is limited to providing the products and services outlined herein in accordance with the terms and conditions of this Agreement. The provision of products sold and services performed by ATN to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any

third party of legal entity outside ATN and the Customer; ATN's obligations under this Agreement extend solely to the Customer. **ATN's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to ATN by the customer or customer's dealer. ATN shall not, in any event, be liable for special, indirect, incidental, or consequential damages, including, but not limited to, lost income, lost revenue, or lost profit, whether such damages were foreseeable or not at the time of purchase, and whether or not such damages arise out of a breach of warranty, a breach of agreement, negligence, strict liability or any other theory of liability.**

PRODUCT WARRANTY REGISTRATION

In order to validate the warranty on your product, ATN must receive a completed Product Warranty Registration Card for each unit or complete warranty registration on our website at www.atncorp.com. Please complete the included form and immediately mail it to our Service Center: ATN Corporation, 1341 San Mateo Avenue, South San Francisco, CA 94080.

OBTAINING WARRANTY SERVICE

To obtain warranty service on your unit, End-user must notify ATN service department by calling **800-910-2862** or **650-989-5100** or via e-mail **service@atncorp.com** to receive a Return Merchandise Authorization number (RMA).

When returning please take or send the product, postage paid, with a copy of your sales receipt to our service center, ATN Corporation at the address noted above. All merchandise must be fully insured with the correct postage; ATN will not be responsible for improper postage or, missing or damaged merchandise during shipment.

When sending product back, please clearly mark the RMA# on the outside of the shipping box. Please include a letter that indicates your RMA#, Name, Return Address, reason for service return, Contact information such as valid telephone numbers and/or e-mail address and proof of purchases that will help us to establish the valid start date of the warranty. Product merchandise returns that do not have an RMA listed may be refused or a significant delay in processing may occur.

Estimated Warranty service time is 10-20 business days. End-user/customer is responsible for postage to ATN for warranty service. ATN will cover return postage/shipping to continental USA end-users/customers after warranty repair only if product is covered by aforementioned warranty. ATN will return product after warranty service by domestic UPS ground and/or domestic mail. Any other requested, required or international shipping method the postage/shipping fee will be the responsibility of the end-user/customer.



For customer service and technical support, please contact

American Technologies Network Corp.

1341 San Mateo Avenue, South San Francisco, CA 94080

phone: 800-910-2862, 650-989-5100

e-mail: service@atncorp.com

www.atncorp.com